




CALCULATION SHEET

Timber Column

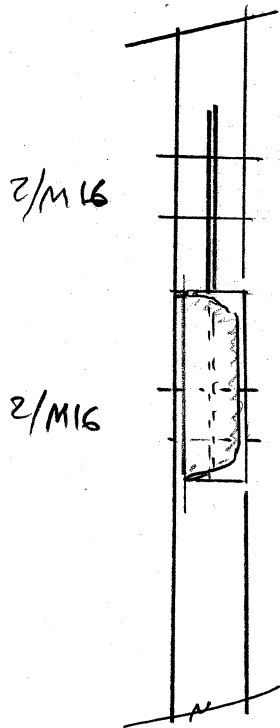

2/M16

2/M16

Sec A-A



40

60


100

100

60

90


(A)

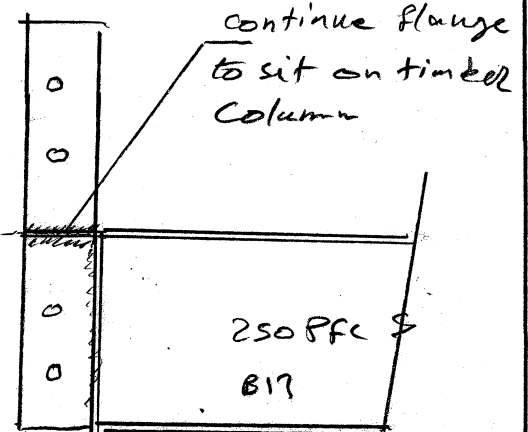

Continue flange
to sit on timber
Column

250 PFC
B17

B17 Timber Column
is not shown

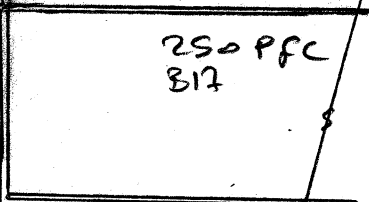

250 PFC
B17

B17 - Timber Column Connection

Engineering Drawing Example

Type: Sketch Detail

- Very uncommon for Type A, B and C jobs